

## **FITMENT INSTRUCTIONS**

### **FOR FITMENT TO:**

**2019-CURRENT CHEVROLET SILVERADO - GMC SIERRA 1500 (NEW BODY STYLE) 6.5" SMARTCAP EVO**

**FOLLOW THE INSTRUCTIONS CAREFULLY TO AVOID DAMAGE TO COMPONENTS OR THE VEHICLE**

**RSISMARTCAP.COM - SUPPORT@RSISMARTCAP.COM - NORTH AMERICA**

## FITMENT KIT CONTENTS

### FITMENT KIT CONTENT (HARDWARE)


#### DESCRIPTION

#### QTY

#### EXAMPLE

CLAMPS

6




WIRE HARNESS (BRAKE LIGHT)

1




THIN RUBBER PAD

6



10MM RUBBER PAD

6



5MM X 30MM FOAM SEAL TAPE

1



### REQUIRED TOOLS

#### CATEGORY

#### TOOLS

#### EXAMPLE

Socket Wrench

13MM SOCKET




Combination Wrench

13MM FLAT



Torque Wrench

13MM SOCKET



PLEASE ADHERE TO BELOW TO PREVENT DAMAGE TO TRUCK AND RSI SMARTCAP DURING FITMENT



**WARNING**

1. ONLY USE THE RECOMMENDED TOOLS AS INDICATED IN THE FITMENT INSTRUCTION ABOVE
2. ONLY USE THE HARDWARE PROVIDED IN THE FITMENT KIT OUTLINED ABOVE.
3. HANDLE ALL RSI SMARTCAP FITMENT COMPONENTS WITH CARE UPON UNPACKING.
4. IT IS RECOMMENDED THAT THE MINIMUM OF FOUR PEOPLE ARE USED TO LIFT THE RSI SMARTCAP.
5. NEVER USE ACETONE ON PAINTWORK


# FITMENT OF THE RSI SMARTCAP TO TRUCK

## STEP ONE

1. REMOVE THE BACKING TAPE FROM THE FOAM STRIP. (SEE FIGURE 1)
2. APPLY FOAM STRIP ON THE FRONT LIP OF THE PICK UP BOX TO ACCOUNT FOR ANY HEIGHT DIFFERENCES BETWEEN THE PICKUP BOX SIDES AND THE FRONT PICKUP BOX PANEL. (SEE FIGURE 2)
3. CUT TO LENGTH (SEE FIGURE 3)


### FIGURE 1

1. FOAM STRIP
2. ADHESIVE
3. ADHESIVE BACKING

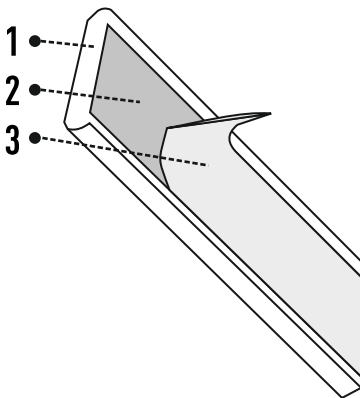


### FIGURE 2

- FOAM STRIP  
FRONT PICKUP BOX PANEL

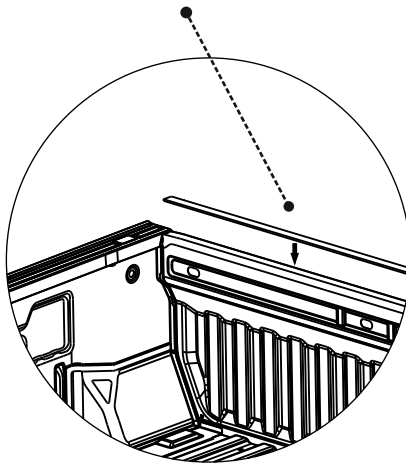


### FIGURE 3

- FOAM STRIP  
TRIM EXCESS FOAM STRIP

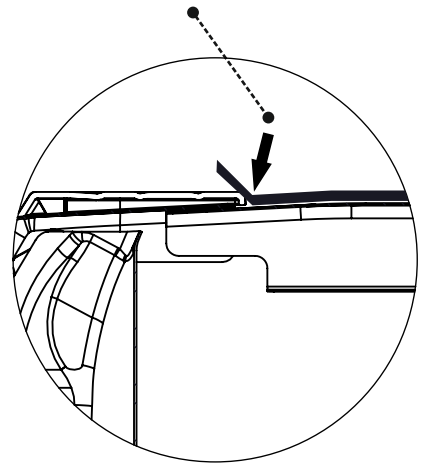

## STEP TWO


1. A MINIMUM OF FOUR PEOPLE ARE RECOMMENDED TO PICK UP AND PLACE THE RSI SMARTCAP ONTO THE TRUCK.
2. ONCE THE RSI SMART CAP IS CENTERED, PLACE CLAMPS IN THE POSITIONS. (SEE FIGURE 3)
3. PLACE THE SUPPLIED THIN RUBBER PAD ON THE SIDE PANEL TO PREVENT CLAMP FROM SCRATCHING THE PAINT.
4. PLACE THE 10MM RUBBER PAD UNDER THE SIDE PANEL, BETWEEN THE PICKUP BOX AND THE RSI SMARTCAP, WHERE CLAMP IS COMPRESSING. (SEE FIGURE 4)
5. ONCE THE RUBBER SPACERS ARE IN PLACE UNDER EVERY CLAMP, PROCEED TO SUFFICIENTLY FASTEN THE CLAMPS TO 9 FT-LB.

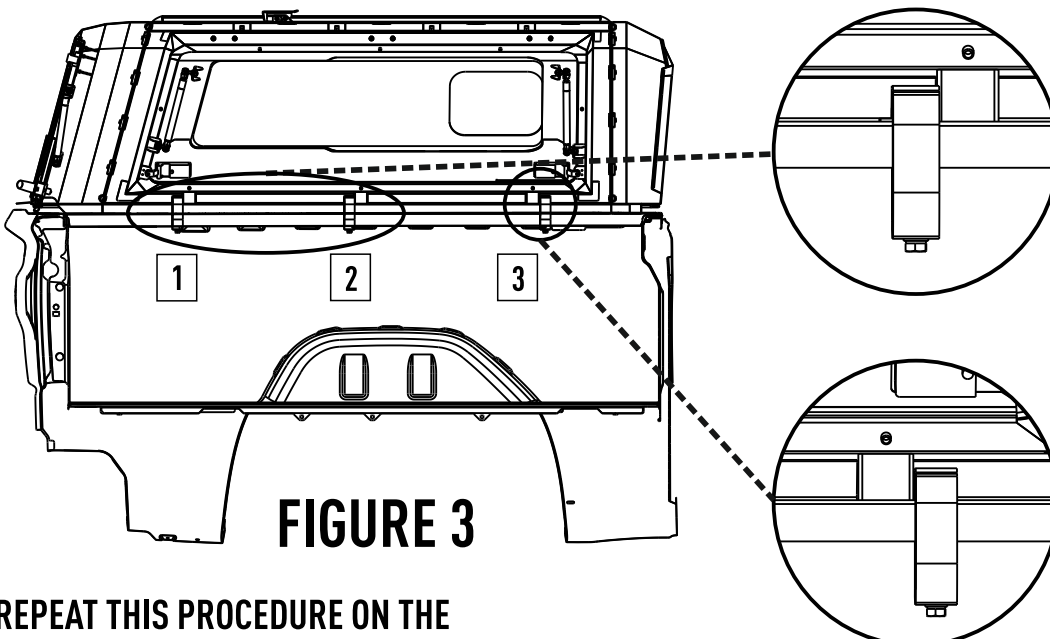

### FIGURE 3

REPEAT THIS PROCEDURE ON THE  
OPPOSITE HAND SIDE OF THE VEHICLE

## FITMENT OF THE RSI SMARTCAP TO TRUCK

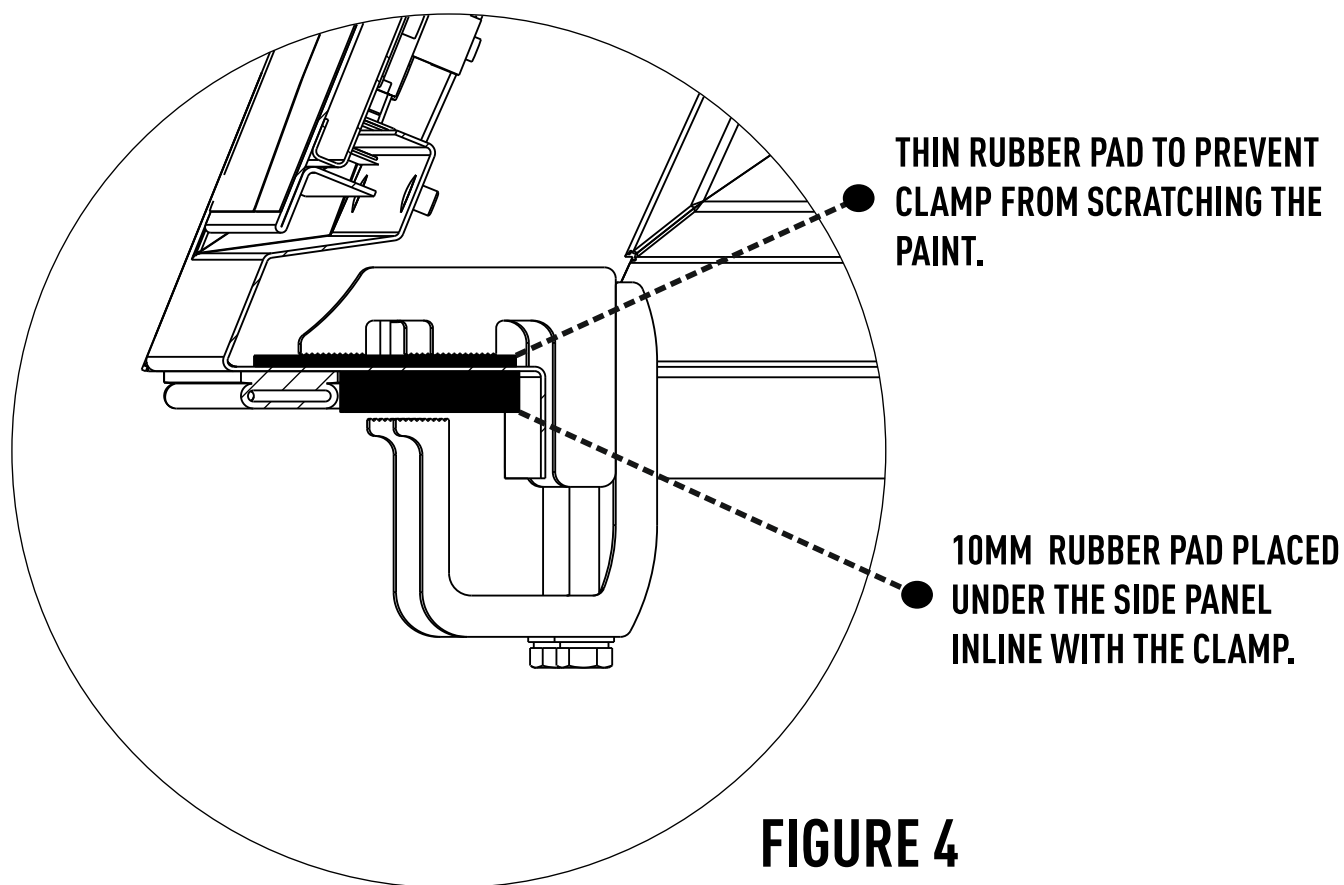

### STEP THREE

1. PLUG IN THE WIRE HARNESS INTO THE EXTENSION HARNESS SUPPLIED WITH THE RSI SMARTCAP. (SEE FIGURE 5)
2. REFER TO HARNESS CONNECTING INSTRUCTIONS TO PLUG INTO VEHICLE.

